

TABELLA INDIRIZZAMENTO MODULO RP296E04000A

ID	Microinterru		
	1	2	3
01	OFF	OFF	OFF
02	ON	OFF	OFF
03	OFF	ON	OFF
04	ON	ON	OFF
05	OFF	OFF	ON
06	ON	OFF	ON
07	OFF	ON	ON
08	ON	ON	ON